



Arizona Archery Enterprises
2781 N. Valley View Drive • Prescott Valley, AZ 86314
Phone: 928-772-9887 • Fax: 928-772-6287
www.arizonaarchery.com

Freakshow

The Freakshow is a specially designed rest to be set up so it is an anti-torque target rest. It is also the only rest that has a T-Slot on the mounting bracket to be completely adjustable. The T-Nuts are made to mount the rest in any location on your bow that best fits how you want to set up your Freakshow rest.

Mount the Freakshow to the side of your bow with the enclosed 5/16-24 x 3/4" mounting bolt placing it through the T-Nut that has no threads. Make sure the rest is at right angles (90-degrees) to your bowstring or riser. Now move your center shot to align your arrow with the center of your bow. This can be done by loosening the horizontal micro-adjustment nut to move the horizontal adjustment block left or right. There are three screw holes that the horizontal socket-head screw can be placed into to allow for more adjustment if necessary.

There are two ways to move the launcher blade. You can use the vertical micro-adjustment thumb screw. Simply loosen the vertical socket-head screw (located on the side of the mount) and turn the vertical micro-adjustment thumb screw. To rotate the launcher arm, loosen the locking set screw (located under the

horizontal adjustment block) and the locking socket-head screw (located on the side of the horizontal adjustment block). Make sure to tighten the locking set screw and locking socket-head screw after adjustment.

The Freakshow has a unique raised hex on the launcher arm that matches up with the launcher blades. This allows you to change blades at any time without losing your center shot adjustment. Simply remove the launcher arm socket-head screw and stepped washer and replace the launcher blade making sure that the hex hole is seated correctly before tightening the launcher arm socket-head screw.

Freakshow launchers are available in these configurations; Standard, Wide, and Freak Blade. The Standard width blade is for carbon arrows and smaller aluminum shafts. The Wide width blade is for the larger aluminum and carbon shafts. The Freak Blade width is a narrow blade designed for micro-diameter arrows. All three blades are available in .008", .010", and .012" thickness for a wide range of tuning possibilities. All Blades are available in Original length: 1.85" and Short length: 1.625".

