

FREE FLYTE ELITE

PAT. NO. 5503136



Arizona Archery Enterprises
2781 N. Valley View Drive • Prescott Valley, AZ 86314
Phone: 928-772-9887 • Fax: 928-772-6287
www.arizonaarchery.com

The Free Flyte Elite arrow rest has been designed as the ultimate in finger shooting rest. This rest has been performing at a world class level on both target bows and hunting bows for many years.

Mounting: The Free Flyte Elite can be mounted to your bow with the bolt supplied and a cushion plunger. It has an additional quick detach mount that can be mounted to your bow with the two 6 x 32 screws enclosed.

Adjusting: Adjust your rest horizontally before you begin to adjust the arrow support arm. When the arrow support arm is folded into the bow it should lay flat against the window. The arrow support arm has a slight hook in it to cradle the arrow against the spine point or cushion plunger tip. The arrow support arm can be adjusted in two ways. For major adjustments, loosen the set screw in the pivot block. For minor ad-

justments, use the Nylon adjustment screw. And you can micro tune the Free Flyte Elite by loosening the SHCS on the top of the rest and sliding the Magnet Holder right or left as needed.

The rest has been assembled with the reversible magnet set to repel the magnet in the pivot block. In this position the rest can be used as a flipper style rest. To change the rest to have the arrow support arm move out of the way upon release, simply remove the large magnet and reverse ends. In this position the arrow support arm needs to be pulled out and the arrow placed on the support arm. The weight of the arrow will hold the support arm out until the arrow is released. At the point of release the arrow will bend and move slightly off the rest and the arrow support arm will move in towards the bow before the fletching gets there. Therefore the name "Free Flyte".

