

LIL' FREAKSHOW



Arizona Archery Enterprises
2781 N. Valley View Drive • Prescott Valley, AZ 86314
Phone: 928-772-9887 • Fax: 928-772-6287
www.arizonaarchery.com

The lil' freakshow is a very simple yet sturdy arrow rest with an external spring adjustment system. We have also incorporated our dual bushing system and an internal spring bushing. Our sliding launcher system allows you to make left and right adjustments without loosening the spring collar. Once your launcher is set you will need to adjust the arrow cage into the correct position. It can be adjusted by loosening the arrow cage set screw. Mole skin to cover the arrow cage is included.


Mounting and Setup

Use the 5/16-24" x 3/4" bolt to mount the lil' freakshow to your bow. Adjust the launcher blade height by loosening the stop collar and rotating the axle to the desired height. Be careful not to let the spring move away from the rest

plate or you will create left and right play in the rest.

Once your launcher blade height adjustments are made, you can then adjust the launcher blade left and right by sliding the entire launcher block. The flat on the axle will allow you to maintain your launcher blade height after the adjustment is made.

Spring adjustment can be made by loosening the spring collar and rotating it forward for heavier or backward for lighter tension. Be sure to hold the stop collar against the stop pin while adjusting the spring tension or the spring may push away from the rest plate. Holding the launcher block and blade with your left hand and adjusting the spring with your right hand will work well if the rest is already mounted to your bow.

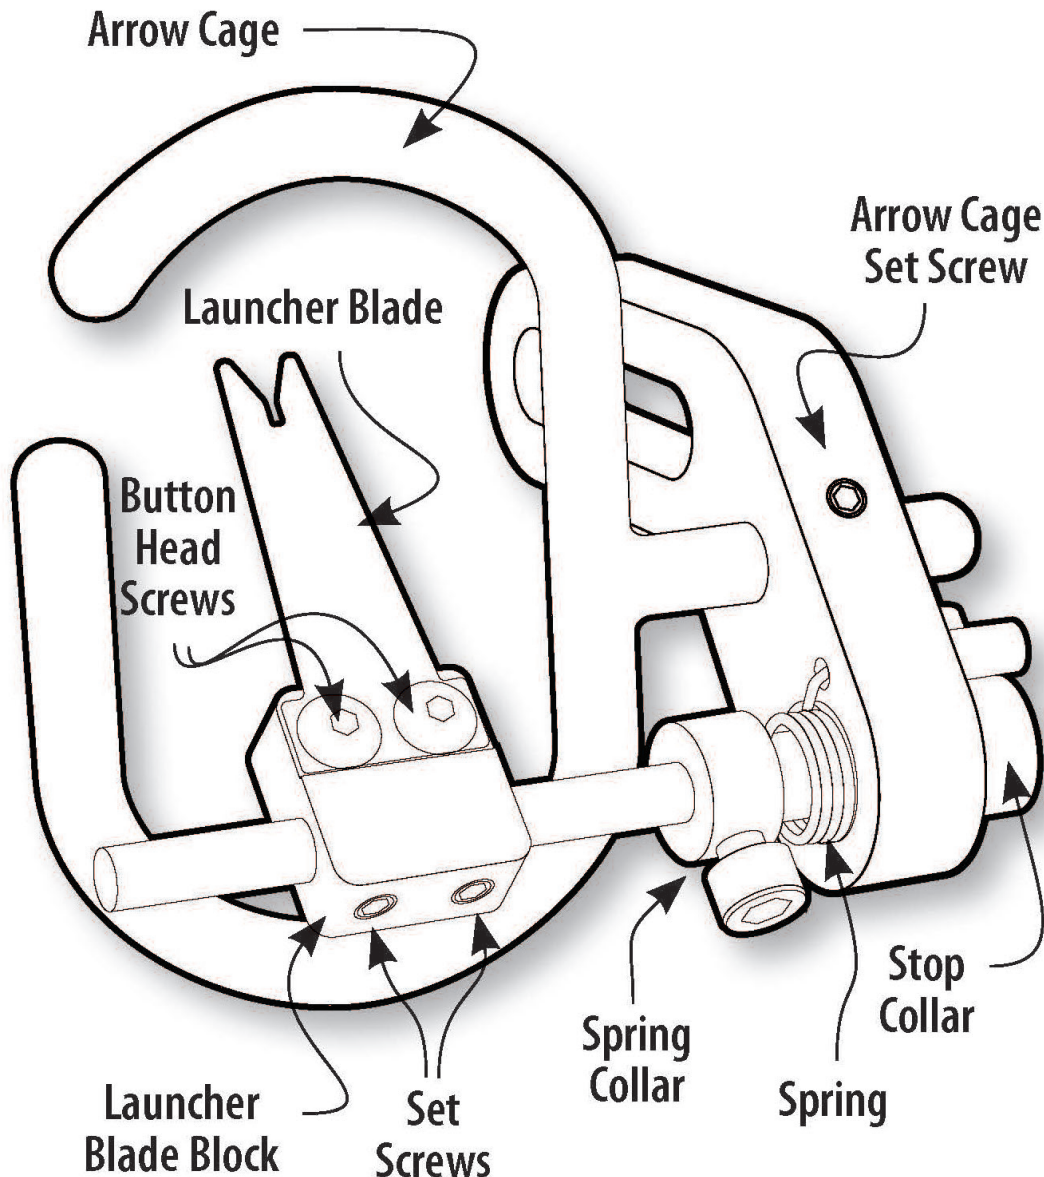

AAE Products are Proudly

Made in USA