



# STINGER



The Stinger arrow rest is a very simple yet sturdy design with an external spring adjustment system. We have also incorporated our dual bushing system and an internal spring gushing to make it a no play arrow rest. Our sliding launcher system allows you to make left and right adjustments without loosening the spring collar.

Use the 5/16-24 x 3/4 bolt to mount the Stinger to your bow. The Stinger should be mounted at a slight downward angle with the top of the axle even with the top of the bow shelf.

Adjust the prong height by loosening the stop collar and rotating the axle to the desired height. Be careful not to let the spring move away from the rest plate or you will create left and right play in the rest.

Once your prong height and major left and right

adjustments are made, you can adjust the prongs left and right by sliding the entire U joint. The flat on the axle will allow you to maintain your prong height after the adjustment is made.

Spring adjustment can be made by loosening the spring collar and rotating it forward for heavier or backward for lighter tension. Be sure to hold the stop collar against the stop while adjusting the spring tension or the spring may push away from the rest plate. Holding the U joint and prongs with your left hand and making the adjustment to the spring. It will work well if the rest is already mounted to your bow.

Prong width can also be adjusted by simply loosening the set screws and rotating the prongs to their desired position and re-tightening the set screws.

## Arizona Archery Enterprises

2781 N. Valley View Drive • Prescott Valley, AZ 86314  
Phone: 928-772-9887 • Fax: 928-772-6287  
[www.arizonaarchery.com](http://www.arizonaarchery.com)

