

PROPHECY[®]



AAE's *Prophecy* rest is a Full-Capture Fall-Away rest designed for hunters that demand the maximum in accuracy, consistency and dependability. Built on AAE's renowned Pro Series frame providing both vertical and horizontal micro adjust for ease of set-up and fine tuning. Our proprietary trigger mechanism includes an integrated Nano-second delay allowing the rest to stay up longer while maintaining maximum clearance. The launcher is flexible & unbreakable for added forgiveness and minimal arrow noise. The stainless steel tolerance fit axle rotates on twin stainless steel sealed ball bearings for ultimate strength and consistency. Field replaceable activation cord for ease of set-up and timing. The *Prophecy's* internal mechanism does not cycle when letting down reducing potential unwanted noise and is the longest lasting in its class. The *Prophecy* is available in Black and Red, RH or LH, Standard Mount.

INSTALLATION: Mount your rest to the side of your bow with the included $5/16-24 \times 3/4$ " mounting bolt. Be sure the rest is level if using the standard mount. Tighten the *mount set screw* to lock the rest in place. Cock the *flexible molded launcher* of the *Prophecy* by pressing down on the *launcher base* until the launcher locks into the loaded (UP) position. Next, loosen the *launcher set screws* and slide *launcher* to the left or right to get your approximate center shot. Minor center shot adjustments can be made later during tuning using the *horizontal micro adjust*. The *capture bar* can be adjusted up and down for clearance by loosening the *capture bar button head screws*.

AAE LAUNCH PAD: The arrow cradle on the *launch pad* should be placed near the front edge of the riser.

SETTING NOCK HEIGHT: For optimum performance the *Prophecy's* flexible launcher needs to be able to go below horizontal in the down position to engage the anti-bounce back feature of the rest. Make sure the rest is in the down position, if the *launcher* is in the up position simply rotate the *activation knob* forward to fire the rest. Loosen the *Vertical Lock button head screw*, then turn the *vertical micro adjust screw* until the *launcher* is resting on the **AAE Launch Pad** in a position just below horizontal. Re-tighten the *vertical lock button head screw*. Using a bow square, set your nock height at even to 1/8-inch high.

ATTACHING THE ACTIVATION CABLE: The *Prophecy* uses an *activation cord* designed to be attached to the down buss cable of your bow. Provided with the rest is **AAE's** exclusive *eZ-Clamp* that when used with the *Prophecy's* tune-able timing knob makes for a very quick and simple set-up and installation that does not require a bow press. The second method is recommended for the extreme hunter and/or close clearance cables. This method does require the use of a bow press.

Option 1 - MOUNTING THE EZ-CLAMP: The *eZ-Clamp* needs to be attached to the down buss cable below the rest a minimum of 2-inches using the included *Plastite screws*. The *activation cord hole* should face the riser of the bow to avoid rotating the cables of the bow when the arrow is released. Feed the *activation cord* through the *activation cord hole* in the *eZ-Clamp*. Pull the *activation cord* snug but not tight. Tighten the *eZ-Clamp locking set screw* so that the cord can just be pulled through. Draw the bow—the cord should slide through the *eZ-Clamp* once the *knob* reaches its *stop*. Let the bow down (**DO NOT DRY FIRE THE BOW**). Tighten the *locking set screw* in the *eZ-Clamp*. **DO NOT** strip the *eZ-Clamp locking set screws*. Your **AAE Prophecy** arrow rest is now ready to shoot.

Option 2 - Extreme Hunting: For extreme hunting use or close clearance cables **AAE** also recommends the following *activation cord* installation. This method requires a "Tied in" knot to be installed on the downward traveling cable approximately 6"- 8" below **rod**.



PROPHECY[®]

Arizona Archery Enterprises
2781 N. Valley View Drive • Prescott Valley, AZ 86314
Phone: 928-772-9887 • Fax: 928-772-6287
www.arizonaarchery.com

To prevent any unwanted movement of the knot it is recommended that the bow be pressed in a bow press so the material being used can be woven 3 times through the cable before creating the knot. The *activation cord* is then attached under the knot using a basic half hitch.



Slide the *activation cord* up to knot and adjust timing using *set screw* on the *activation knob* on rest. This installation method allows for easy in field servicing.

Proper Timing of your Prophecy Rest: There are (2) laser etched lines on the housing of the **Prophecy** and (1) laser etched line on the end of the **Prophecy Activation Knob**. When your bow is at full draw the line on the *Activation Knob* needs to be between the (2) lines on the housing. Minor tune adjustments can be made by adjusting the timing within these marks.

AAE Products are
Proudly

Made in USA

